


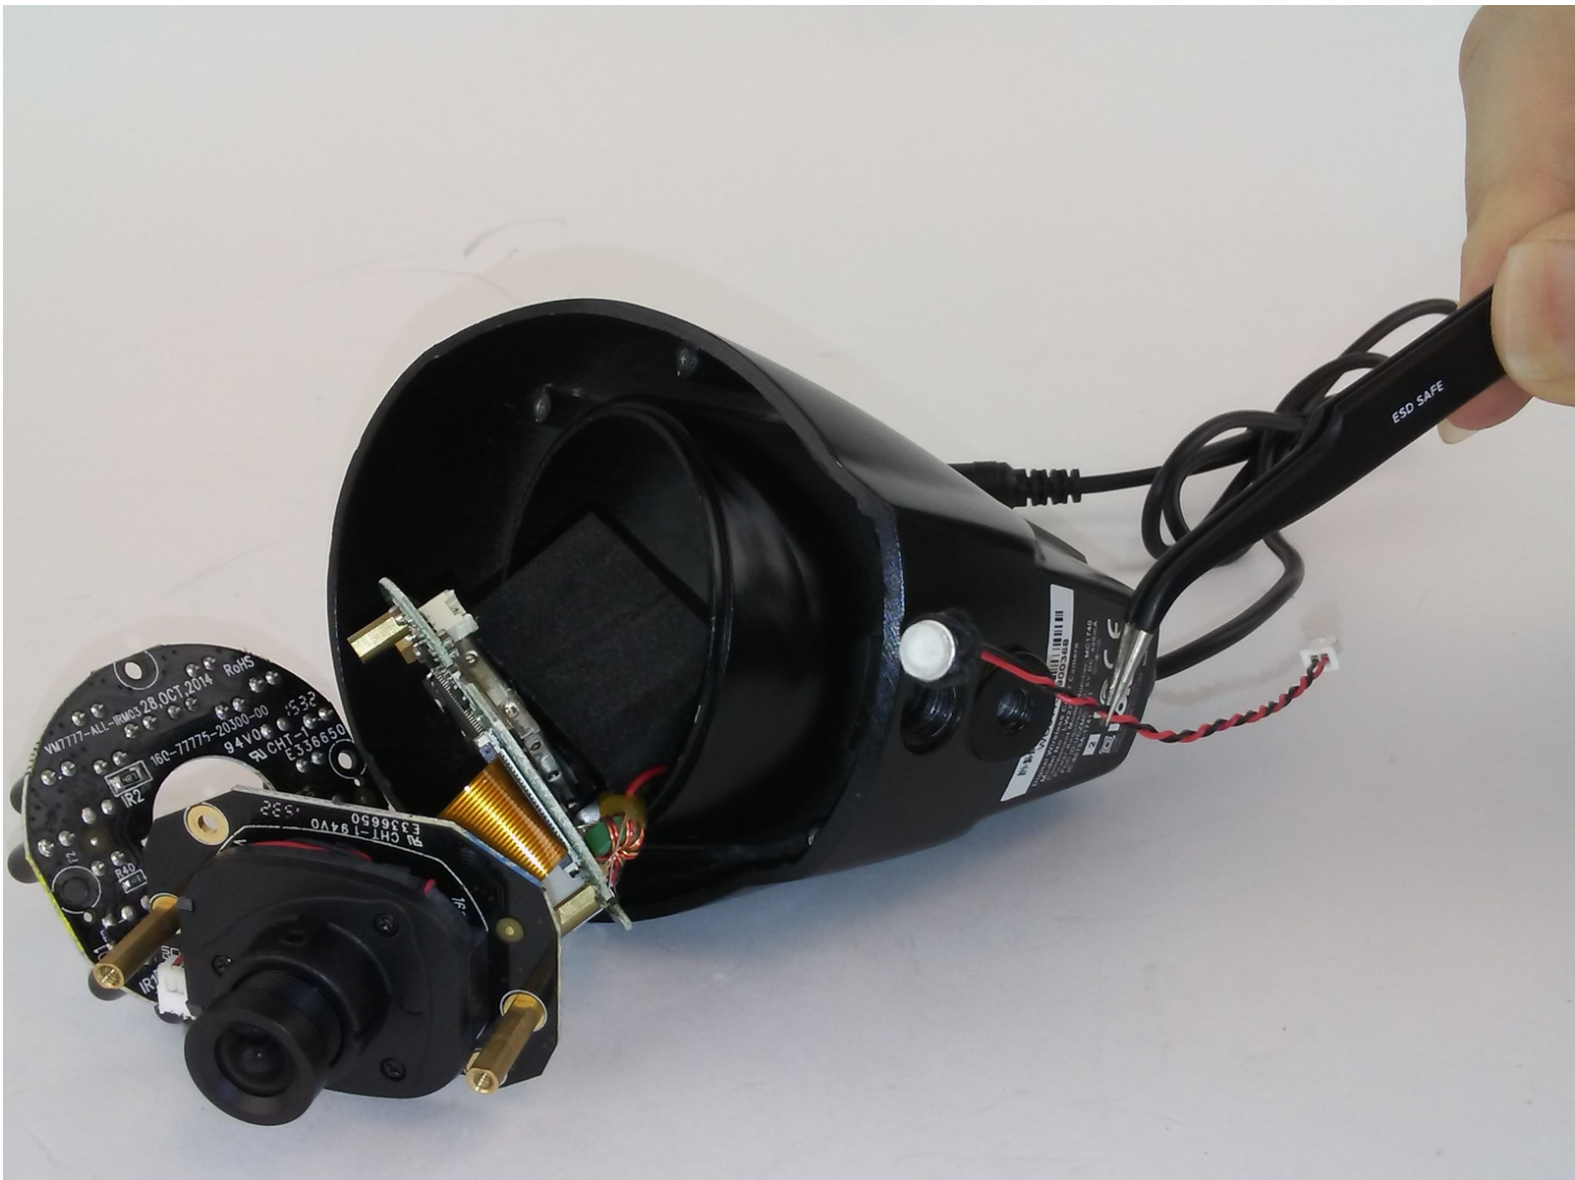

Lorex LW2742 Microphone Replacement

Replacing the microphone on your Lorex LW2742 security camera.

Written By: Alex Kusmierz



INTRODUCTION

Are your video recording's lacking audio or experiencing audio distortion? Try replacing the microphone to solve this problem.



TOOLS:


- [64 Bit Driver Kit](#) (1)
 - [Tweezers](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Microphone



- Remove the six 10mm Torx T10 screws on camera face.

Step 2

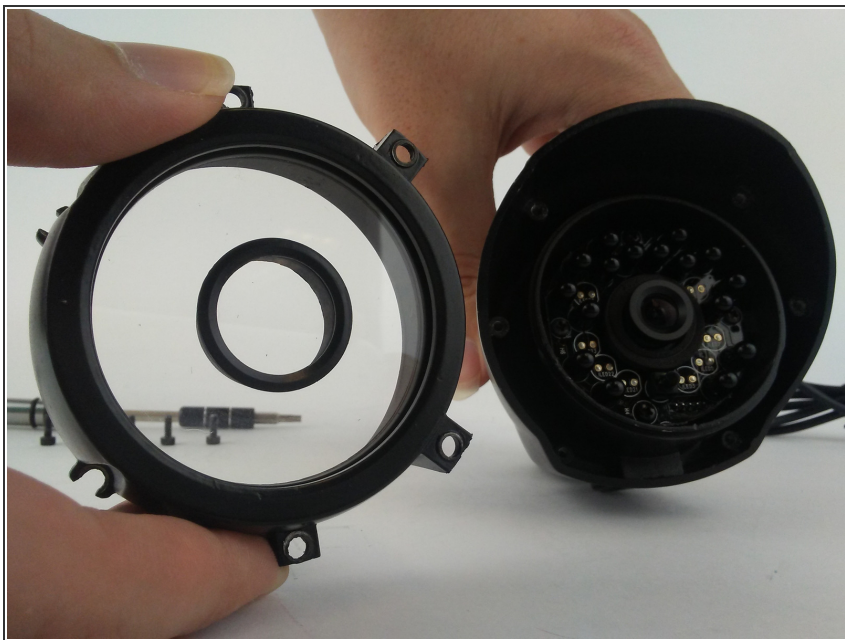


- Remove the exterior lens cover.

Step 3




- Remove the LED foam ring with tweezers.

 Be aware, the electronic components of the LED board may be compromised if you use your fingers instead of tweezers for this step.

Step 4






- Remove the two 5mm Phillips #1 screws.
- Remove the two 8mm Phillips #0 screws.
-  When reassembling, tighten the left and right 8mm screws first. Followed by the top and bottom 5mm screws.

Step 5




- Remove the two 5mm Phillips #1 screws.

Step 6

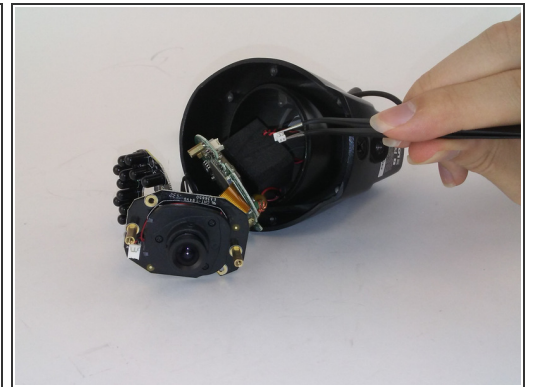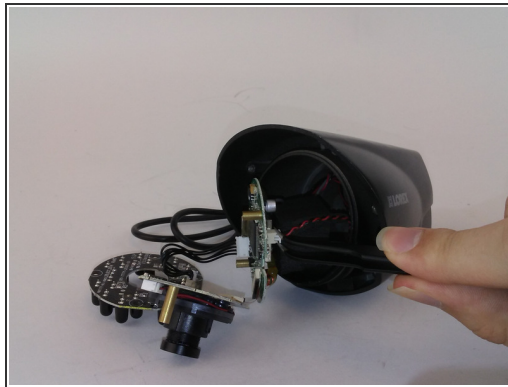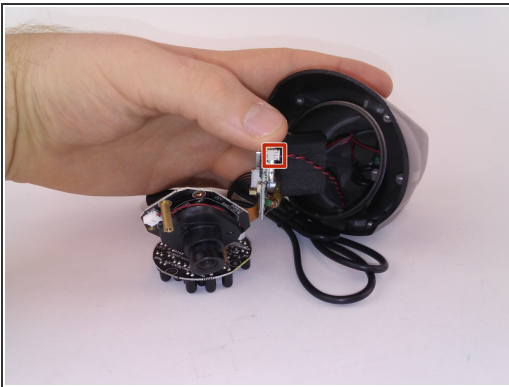

- Use tweezers to disconnect the microphone wires from the internal components of camera.

Step 7

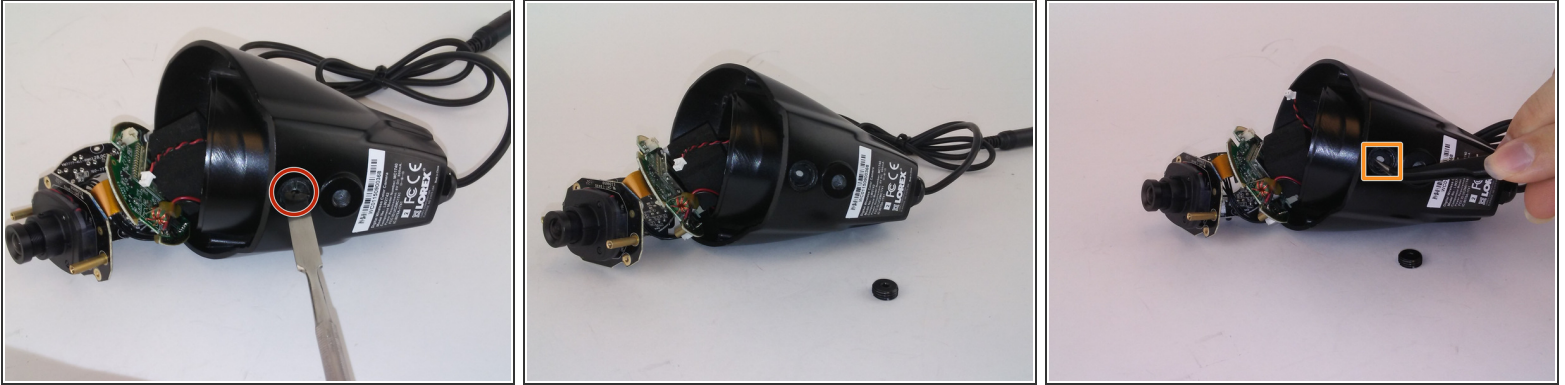

- Remove the 4mm Flathead #4 screw on the bottom of the camera.
- Remove the weatherproof gasket around the microphone with tweezers.

Step 8



- Remove the microphone.
- ⓘ Push the microphone from the inside out for easier removal.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-25 06:41:30 AM.